


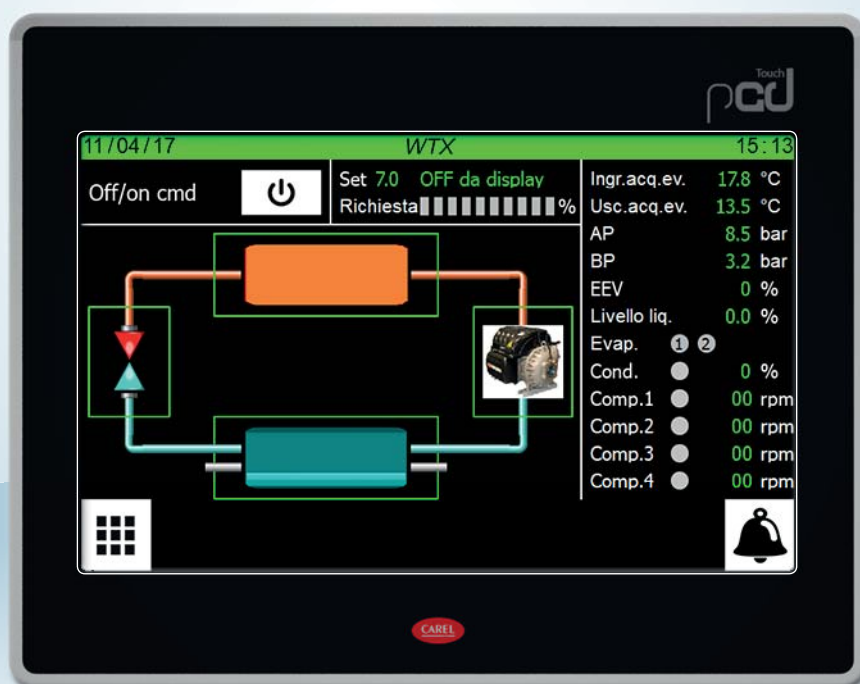

Manuale per creazione BMS - BMS manual



Connessione
tramite Internet



ModBus

Compatibile
con il protocollo
ModBus



Controllo
centralizzato

WTX

IT

EN



INDICE

IT

ITALIAN:

CREAZIONE DI UN SISTEMA BMS.....	4
COLLEGAMENTO MODBUS RTU SU RS485	4
VARIABILI DI DEFAULT BMS CARD	4
VARIABILI ANALOGICHE	5
VARIABILI INTERE.....	6
VARIABILI DIGITALI.....	8

EN

ENGLISH:

CREATING A BMS SYSTEM.....	13
MODBUS RTU CONNECTION TO RS485	13
DEFAULT BMS CARD VARIABLES	13
ANALOGUE VARIABLES	14
INTEGER VARIABLES	15
DIGITAL VARIABLES.....	17


CREAZIONE DI UN SISTEMA BMS

Collegamento Modbus RTU su RS485

La scheda di controllo pCO5+ può comunicare, utilizzando il protocollo Modbus RTU su standard elettrico RS485, con un sistema BMS esterno; per poter realizzare questo collegamento la scheda ha bisogno di accessori specifici:

- **AER485P1**: nel caso in cui si voglia collegare la scheda pCO5+ al sistema BMS tramite collegamento via cavo (per maggiori informazioni sulla tipologia di cavo fare riferimento alla documentazione dell'accessorio AER485P1);
- **AERNET**: nel caso in cui si voglia collegare la scheda pCO5+ al sistema BMS tramite collegamento ethernet (per maggiori informazioni fare riferimento alla documentazione dell'accessorio AERNET);

Il collegamento tra la scheda pCO5+ e i sistemi BMS è riassunto nello schema riportato a fianco;

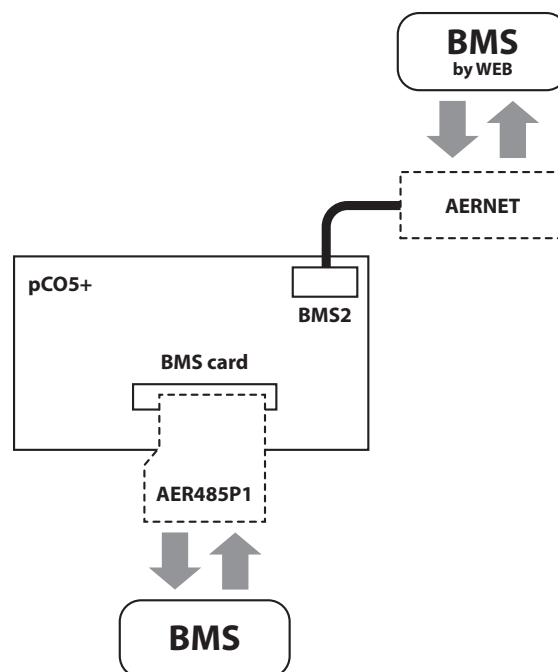

Variabili di default BMS Card

Modo di comunicazione	Modbus RTU
Tipo di comunicazione	RS485 standard, asincrono, 1 bit di start
Velocità di comunicazione	19200 baud
Stop bit	2 stop bit
Parity mode	Nessuna parità
Base adress	Protocol addresses (Base 0) Gli indirizzi partono da zero. Esempio per lettura del registro = 1: 01 03 00 01 00 0A 94 0D

Variabili ANALOGICHE

R = Codice comando Modbus = 3

R/W = Codice comando Modbus = 6

BMS Address	Descrizione	UOM	Min	Max	Read/Write
1	U5 - Uscita acqua evaporatore	°C	-999,9	999,9	R
2	U4 - Ingresso acqua evaporatore	°C	-999,9	999,9	R
3	IGV Compressore 1	%	0.0	110.0	R
4	IGV Compressore 2	%	0.0	110.0	R
5	Temperatura inverter Compressore 1	°C	-999,9	999,9	R
6	Temperatura inverter Compressore 2	°C	-999,9	999,9	R
7	U1 – Alta pressione	bar	-999,9	999,9	R
8	U2 – Bassa Pressione	bar	-999,9	999,9	R
9	Rapporto compressione calcolato come U1/U2	---	0	99,9	R
10	Versione software X.Y (il termine finale .Z indirizzo intero 51)	---	0	99,9	R
12	Temperatura mandata compressore 1	°C	-10	999,9	R
13	Temperatura mandata compressore 2	°C	-10	999,9	R
14	U9 - Temperatura liquido uscita condensatore	°C	0	999,9	R
15	U10 - Temperatura liquido ingresso valvola termostatica	°C	0	999,9	R
16	Temperatura Aspirazione compressore 1	°C	-999,9	999,9	R
17	Temperatura Aspirazione compressore 2	°C	-999,9	999,9	R
18	U3 – Uscita acqua evaporatore comune	°C	-999,9	999,9	R
19	U7 - Ingresso analogico multifunzione	---	0	999,9	R
23	Livello liquido	%	0,0	100,0	R
24	Potenza richiesta Compressore 1 (kW)	KW	0	1000.0	R
25	Potenza richiesta Compressore 2 (kW)	KW	0	1000.0	R
26	Potenza assorbita Compressore 1	KW	0	1000.0	R
27	Potenza assorbita Compressore 2	KW	0	1000.0	R
28	Superheat compressore 1	K	-999,9	999,9	R
29	Superheat compressore 2	K	-999,9	999,9	R
30	U8 WTX - Temperatura uscita acqua condensatore	°C	-999,9	999,9	R
31	IGV Compressore 3	%	0	110.0	R
32	IGV Compressore 4	%	0	110.0	R
33	Temperatura inverter Compressore 3	°C	-999,9	999,9	R
34	Temperatura inverter Compressore 4	°C	-999,9	999,9	R
35	Temperatura mandata compressore 3	°C	-999,9	999,9	R
36	Temperatura mandata compressore 4	°C	-999,9	999,9	R
37	Temperatura Aspirazione compressore 3	°C	-999,9	999,9	R
38	Temperatura Aspirazione compressore 4	°C	-999,9	999,9	R
39	Potenza richiesta Compressore 3 (kW)	KW	0	1000.0	R
40	Potenza richiesta Compressore 4 (kW)	KW	0	1000.0	R
41	Potenza assorbita Compressore 3	KW	0	1000.0	R
42	Potenza assorbita Compressore 4	KW	0	1000.0	R
43	Superheat compressore 3	K	-999,9	999,9	R
44	Superheat compressore 4	K	-999,9	999,9	R
46	U6 WTX - Temperatura ingresso acqua condensatore	°C	-999,9	999,9	R
191	Setpoint attuale ventilatori/pompa condensatore	bar	0	999,9	R
192	Differenziali attuale ventilatori/pompa condensatore	bar	-999,9	999,9	R
193	Setpoint livello liquido (0.0 ... 100.0%)	%	0.0	100.0	R/W
197	Differenziale impianto attivo	°C	-999,9	999,9	R
198	Set point impianto attuale	°C	-999,9	999,9	R
202	Differenziale impianto	°C	0	999,9	R/W
204	Set point 1, freddo	°C	-999,9	999,9	R/W

BMS Address	Descrizione	UOM	Min	Max	Read/Write
205	Set point 2, freddo	°C	-999,9	999,9	R/W

Variabili INTERE

R = Codice comando Modbus = 3

R/W = Codice comando Modbus = 6

BMS Address	Carel address	Descrizione	UOM	Min	Max	Read/Write
5002	1	Modo chiller (0=Comfort;1=ECONOMY;2=DA FASCE;)	---	0	2	R/W
5003	2	Stato procedura partenza compressori (USO INTERNO AERMEC)	---	0	9999	R
5004	3	Stato compressore 1 (0=off, 1=lockout state, 2=resetting, 3=ramping up, 4=partially closed, 5=normal state, 6=maxflow, 7=min IGV, 8=interlock open, 9=fault waiting, 10=high temp stop, 11=loading up)	---	0	99	R
5005	4	Stato compressore 2 (0=off, 1=lockout state, 2=resetting, 3=ramping up, 4=partially closed, 5=normal state, 6=maxflow, 7=min IGV, 8=interlock open, 9=fault waiting, 10=high temp stop, 11=loading up)	---	0	99	R
5006	5	Velocita' compressore 1 [0...48000]/10 RPM	rpm	0	9999	R
5007	6	Velocita' compressore 2 [0...48000] /10 RPM	rpm	0	9999	R
5008	7	Contaore pompa 2 impianto, parte alta	migliaia_h	0	999	R
5009	8	Contaore pompa 1 impianto, parte alta	migliaia_h	0	999	R
5010	9	Contaore pompa 1 impianto, parte bassa	h	0	999	R
5011	10	Contaore pompa 2 impianto, parte bassa	h	0	999	R
5012	11	Limite richiesta freddo	%	0	100	R/W
5013	12	Contaore parte alta, comp.1	migliaia_h	0	999	R
5014	13	Contaore parte bassa, comp.1	h	0	999	R
5015	14	Contaore parte alta, comp.2	migliaia_h	0	999	R
5016	15	Contaore parte bassa, comp.2	h	0	999	R
5017	16	Richiesta termostatica	%	0	100	R
5018	17	Limite richiesta termostatica (da ingr. multif. U7 limitazione potenza)	%	0	100	R
5020	19	Limite richiesta Turbocor 1	%	0	100	R
5021	20	Limite richiesta Turbocor 2	%	0	100	R
5025	24	Richiesta totale impianto	%	0	100	R
5026	25	Potenza richiesta Compressore 1 (%)	%	0	100	R
5027	26	Potenza richiesta Compressore 2 (%)	%	0	100	R
5028	27	Velocita' ventilatori/pompa condensatore	%	0	100	R
5029	28	EEV_A, apertura valvola elettronica liquido A (stp)	steps	0	500	R
5030	29	EEV_A, apertura valvola elettronica liquido A (%)	%	0	100	R
5031	30	Potenza attuale compressore 1	%	0	100	R
5032	31	Potenza attuale compressore 2	%	0	100	R
5033	32	Corrente compressore 1	A	0	999	R
5034	33	Corrente compressore 2	A	0	999	R
5035	34	Tensione compressore 1	V	0	999	R
5036	35	Tensione compressore 2	V	0	999	R
5037	36	Velocità minima [0...48000]/10 compressore 1	rpm	0	4800	R
5038	37	Velocità minima [0...48000]/10 compressore 2	rpm	0	4800	R
5039	38	Velocità massima [0...48000]/10 compressore 1	rpm	0	4800	R
5040	39	Velocità massima [0...48000]/10 compressore 2	rpm	0	4800	R
5048	47	Contaore parte alta, comp.3	migliaia_h	0	999	R
5049	48	Contaore parte bassa, comp.3	h	0	999	R
5050	49	Contaore parte alta, comp.4	migliaia_h	0	999	R
5051	50	Contaore parte bassa, comp.4	h	0	999	R

BMS Address	Carel address	Descrizione	UOM	Min	Max	Read/Write
5052	51	Versione software Z (parte finale)	--	0	9	R
5071	70	Configuratore – Sigla chiller (0=TBX,1= WTX)	---	0		R
5072	71	Configuratore WTX– Taglia	---	0		R
5073	72	Configuratore WTX – Efficienza	---	0		R
5074	73	Configuratore WTX – Scambiatore	---	0		R
5075	74	Configuratore WTX – Versione	---	0		R
5076	75	Configuratore WTX – Alimentazione	---	0		R
5102	101	Stato compressore 3 (0=off, 1=lockout state, 2=resetting, 3=ramping up, 4=partially closed, 5=normal state, 6=maxflow, 7=min IGV, 8=interlock open, 9=fault waiting, 10=high temp stop, 11=loading up)	---	0	99	R
5103	102	Stato compressore 4 (0=off, 1=lockout state, 2=resetting, 3=ramping up, 4=partially closed, 5=normal state, 6=maxflow, 7=min IGV, 8=interlock open, 9=fault waiting, 10=high temp stop, 11=loading up)	---	0	99	R
5104	103	Velocita' compressore 3 [0...48000]/10 RPM	rpm	0	4800	R
5105	104	Velocita' compressore 4 [0...48000]/10 RPM	rpm	0	4800	R
5106	105	Limite richiesta Turbocor 3	%	0	100	R
5107	106	Limite richiesta Turbocor 4	%	0	100	R
5108	107	Potenza richiesta Compressore 3 (%)	%	0	100	R
5109	108	Potenza richiesta Compressore 4 (%)	%	0	100	R
5110	109	Potenza attuale compressore 3	%	0	100	R
5111	110	Potenza attuale compressore 4	%	0	100	R
5112	111	Corrente compressore 3	A	0	999	R
5113	112	Corrente compressore 4	A	0	999	R
5114	113	Tensione compressore 3	V	0	999	R
5115	114	Tensione compressore 4	V	0	999	R
5116	115	Velocità minima [0...48000]/10 compressore 3	rpm	0	4800	R
5117	116	Velocità minima [0...48000]/10 compressore 4	rpm	0	4800	R
5118	117	Velocità massima [0...48000]/10 compressore 3	rpm	0	4800	R
5119	118	Velocità massima [0...48000]/10 compressore 4	rpm	0	4800	R
5206	205	Stato unità (1=On,2=Alarm,3=Reboot,4=off BMS, 5=off scheduler, 6=off DIN, 7=off touch, 8=non usato, 9=non usato)	---	0	9	R
6240	1239	EEV_B, apertura valvola elettronica liquido B (%)	%	0	100	R
6241	1240	EEV_B, apertura valvola elettronica liquido B (stp)	steps	0	500	R

Variabili DIGITALI

R = Codice comando Modbus = 1

R/W = Codice comando Modbus = 5

Address	Descrizione	Read/Write
1	On/Off Unita'	R
2	Reset allarmi (1= reset)	R/W
4	ID1 ingresso digitale off/on (0=chiuso, 1=aperto)	R
10	On/Off impianto da Superv.	R/W
13	Allarme compressore 1	R
14	Allarme compressore 2	R
30	NO1 - Pompa 1 evaporatore	R
31	NO14 - Pompa 2 evaporatore	R
32	NO2 - Resistenza antigelo	R
33	NO4 - Consenso valvola EEV	R
34	NO5 - Consenso economizzatore	R
35	NO7 - I/BLOCCO 1 - Consenso turbocor 1	R
36	Compressore 1 ON	R
37	Compressore 2 ON	R
38	NO12 - I/BLOCCO 2 - Consenso turbocor 2	R
42	NO3 - Ventilatore/pompa condensatore	R
43	Solenoide inverter turbocor 1	R
44	Solenoide inverter turbocor 2	R
45	Solenoide motore turbocor 1	R
46	Solenoide motore turbocor 2	R
49	NO13 - I/BLOCCO 3 - Consenso turbocor 3	R
50	NO15 - I/BLOCCO 4 - Consenso turbocor 4	R
51	Compressore 3 ON	R
52	Compressore 4 ON	R
53	Solenoide inverter turbocor 3	R
54	Solenoide inverter turbocor 4	R
55	Solenoide motore turbocor 3	R
56	Solenoide motore turbocor 4	R
78	AL108 - Turbocor2 SCR phase	R
79	AL109 - Turbocor2 Offline	R
80	AL110 - Turbocor2 Startup failed	R
81	AL111 - EVD Offline	R
82	AL112 - EVD Errore Sonda S1	R
83	AL113 - EVD Errore Sonda S2	R
84	AL114 - EVD Errore motore EEV	R
85	AL115 - EVD Eeprom error	R
86	AL116 - Basso Livello Liquido	R
87	AL117 - Alto Livello Liquido	R
88	AL118 - Modbus master sconnesso (comunicazione con Turbocor)	R
89	AL119 - Termico compressore 2	R
90	AL120 - EEV, Batteria scarica	R
93	AL123 - Fuga Gas (ID16 Open)	R
100	Somma di tutti gli allarmi	R
101	AL001 - Da ingresso digitale	R
102	AL002 - Monitore di tensione o fase	R
103	AL003 - Antigelo Evaporatore	R
104	AL004 - Termica compressore 1	R
105	AL005 - Flussostato impianto	R
106	AL006 - Da ingresso digitale, EEV	R

Address	Descrizione	Read/Write
107	AL007 - Alta Pressione pressostato	R
108	AL008 - Alta Pressione trasduttore	R
109	AL009 - Bassa Pressione pressostato	R
110	AL010 - Bassa Pressione trasduttore	R
111	AL011 - Bassa pressione grave	R
112	AL012 - Termica ventilatore/pompa condensatore	R
113	AL013 - Termica pompa 1 impianto	R
114	AL014 - Termica pompa 2 impianto	R
115	AL015 - Manutenzione pompa 1 impianto	R
116	AL016 - Manutenzione pompa 2 impianto	R
117	AL017 - Manutenzione Compressore 1	R
118	AL018 - Manutenzione Compressore 2	R
119	AL019 - Sonda U1 guasta o scollegata	R
120	AL020 - Sonda U2 guasta o scollegata	R
121	AL021 - Sonda U3 guasta o scollegata	R
122	AL022 - Sonda U4 guasta o scollegata	R
123	AL023 - Sonda U5 guasta o scollegata	R
124	AL024 - Sonda U6 guasta o scollegata	R
125	AL025 - Sonda U7 guasta o scollegata	R
126	AL026 - Sonda U8 guasta o scollegata	R
127	AL027 - Sonda U9 guasta o scollegata	R
128	AL028 - Sonda U10 guasta o scollegata	R
129	AL029 - Turbocor1 Alta Temperatura Gas premente	R
130	AL030 - Turbocor2 Alta Temperatura Gas premente	R
131	AL031 - Turbocor1 Inverter temp.	R
132	AL032 - Turbocor1 Discharge temp	R
133	AL033 - Turbocor1 Suction press.	R
134	AL034 - Turbocor1 Discharge press.	R
135	AL035 - Turbocor1 Rotor Lock	R
136	AL036 - Turbocor1 Phase current	R
137	AL037 - Turbocor1 Cavity temp.	R
138	AL038 - Turbocor1 overcurrent	R
139	AL039 - Turbocor1 Compressor ratio	R
140	AL040 - Turbocor1 DC Low Voltage	R
141	AL041 - Turbocor1 SCR temp.	R
142	AL042 - Turbocor1 System Locked out	R
143	AL043 - Turbocor1 Calibration failed	R
144	AL044 - Turbocor1 Startup failed	R
145	AL045 - Turbocor1 Axial displacement	R
146	AL046 - Turbocor1 Axial static load	R
147	AL047 - Turbocor1 Front radial disp X	R
148	AL048 - Turbocor1 Front radial disp Y	R
149	AL049 - Turbocor1 Front radial load X	R
150	AL050 - Turbocor1 Front radial load Y	R
151	AL051 - Turbocor1 Back radial disp X	R
152	AL052 - Turbocor1 Back radial disp Y	R
153	AL053 - Turbocor1 Back radial load X	R
154	AL054 - Turbocor1 Back radial load Y	R
155	AL055 - Turbocor1 Single phase Overcurrent	R
156	AL056 - Turbocor1 DC High voltage	R
157	AL057 - Turbocor1 High current	R
158	AL058 - Turbocor1 Sensors error	R

Address	Descrizione	Read/Write
159	AL059 - Turbocor1 IGBT error	R
160	AL060 - Turbocor1 High winding temp.	R
161	AL061 - Turbocor1 Bearing error	R
162	AL062 - Turbocor1 Superheat	R
163	AL063 - Turbocor1 Inverter error signal	R
164	AL064 - Turbocor1 AVC data missing	R
165	AL065 - Turbocor1 Motor Back EMF low	R
166	AL066 - Turbocor1 EEprom error	R
167	AL067 - Turbocor1 Generator mode	R
168	AL068 - Turbocor1 SCR phase	R
169	AL069 - Turbocor1 Offline	R
170	AL070 - Turbocor1 Startup failed	R
171	AL071 - Turbocor2 Inverter temp.	R
172	AL072 - Turbocor2 Discharge temp.	R
173	AL073 - Turbocor2 Suction press.	R
174	AL074 - Turbocor2 Discharge press.	R
175	AL075 - Turbocor2 Rotor Lock	R
176	AL076 - Turbocor2 Phase current	R
177	AL077 - Turbocor2 Cavity temp.	R
178	AL078 - Turbocor2 overcurrent	R
179	AL079 - Turbocor2 Compressor ratio	R
180	AL080 - Turbocor2 DC Low Voltage	R
181	AL081 - Turbocor2 SCR temp.	R
182	AL082 - Turbocor2 System Locked out	R
183	AL083 - Turbocor2 Calibration failed	R
184	AL084 - Turbocor2 Startup failed	R
185	AL085 - Turbocor2 Axial displacement	R
186	AL086 - Turbocor2 Axial static load	R
187	AL087 - Turbocor2 Front radial disp X	R
188	AL088 - Turbocor2 Front radial disp Y	R
189	AL089 - Turbocor2 Front radial load X	R
190	AL090 - Turbocor2 Front radial load Y	R
191	AL091 - Turbocor2 Back radial disp X	R
192	AL092 - Turbocor2 Back radial disp Y	R
193	AL093 - Turbocor2 Back radial load X	R
194	AL094 - Turbocor2 Back radial load Y	R
195	AL095 - Turbocor2 Single phase Overcurrent	R
196	AL096 - Turbocor2 DC High Voltage	R
197	AL097 - Turbocor2 High current	R
198	AL098 - Turbocor2 Sensors error	R
199	AL099 - Turbocor2 IGBT error	R
200	AL100 - Turbocor2 High winding temp	R
201	AL101 - Turbocor2 Bearing error	R
202	AL102 - Turbocor2 Superheat	R
203	AL103 - Turbocor2 Inverter error signal	R
204	AL104 - Turbocor2 AVC data missing	R
205	AL105 - Turbocor2 Motor Back EMF low	R
206	AL106 - Turbocor2 EEprom error	R
207	AL107 - Turbocor2 Generator mode	R
225	AL125 - Manutenzione Compressore 3	R
226	AL126 - Manutenzione Compressore 4	R
227	AL127 - Reset parametri... Riavviare scheda!	R

Address	Descrizione	Read/Write
228	AL128 – Turbocor3 Alta Temperatura Gas premente	R
229	AL129 – Turbocor4 Alta Temperatura Gas premente	R
230	Allarme compressore 3	R
231	Allarme compressore 4	R
232	AL130 - Termica compressore 3	R
233	AL131 - Termica compressore 4	R
251	AL151 - Turbocor3 Inverter temp.	R
252	AL152 - Turbocor3 Discharge temp.	R
253	AL153 - Turbocor3 Suction press.	R
254	AL154 - Turbocor3 Discharge press.	R
255	AL155 - Turbocor3 Rotor Lock	R
256	AL156 - Turbocor3 Phase current	R
257	AL157 - Turbocor3 Cavity temp.	R
258	AL158 - Turbocor3 overcurrent	R
259	AL159 - Turbocor3 Compressor ratio	R
260	AL160 - Turbocor3 DC Low Voltage	R
261	AL161 - Turbocor3 SCR temp.	R
262	AL162 - Turbocor3 System Locked out	R
263	AL163 - Turbocor3 Calibration failed	R
264	AL164 - Turbocor3 Startup failed	R
265	AL165 - Turbocor3 Axial displacement	R
266	AL166 - Turbocor3 Axial static load	R
267	AL167 - Turbocor3 Front radial disp X	R
268	AL168 - Turbocor3 Front radial disp Y	R
269	AL169 - Turbocor3 Front radial load X	R
270	AL170 - Turbocor3 Front radial load Y	R
271	AL171 - Turbocor3 Back radial disp X	R
272	AL172 - Turbocor3 Back radial disp Y	R
273	AL173 - Turbocor3 Back radial load X	R
274	AL174 - Turbocor3 Back radial load Y	R
275	AL175 - Turbocor3 Single phase Overcurrent	R
276	AL176 - Turbocor3 DC High Voltage	R
277	AL177 - Turbocor3 High current	R
278	AL178 - Turbocor3 Sensors error	R
279	AL179 - Turbocor3 IGBT error	R
280	AL180 - Turbocor3 High winding temp	R
281	AL181 - Turbocor3 Bearing error	R
282	AL182 - Turbocor3 Superheat	R
283	AL183 - Turbocor3 Inverter error signal	R
284	AL184 - Turbocor3 24Vdc fault	R
285	AL185 - Turbocor3 Motor Back EMF low	R
286	AL186 - Turbocor3 EEprom error	R
287	AL187 - Turbocor3 Generator mode	R
288	AL188 - Turbocor3 SCR phase	R
289	AL189 - Turbocor3 Offline	R
290	AL190 - Turbocor3 Startup failed	R
291	AL191 - Turbocor4 Inverter temp.	R
292	AL192 - Turbocor4 Discharge temp.	R
293	AL193 - Turbocor4 Suction press.	R
294	AL194 - Turbocor4 Discharge press.	R
295	AL195 - Turbocor4 Rotor Lock	R
296	AL196 - Turbocor4 Phase current	R

Address	Descrizione	Read/Write
297	AL197 - Turbocor4 Cavity temp.	R
298	AL198 - Turbocor4 overcurrent	R
299	AL199 - Turbocor4 Compressor ratio	R
300	AL200 - Turbocor4 DC Low Voltage	R
301	AL201 - Turbocor4 SCR temp.	R
302	AL202 - Turbocor4 System Locked out	R
303	AL203 - Turbocor4 Calibration failed	R
304	AL204 - Turbocor4 Startup failed	R
305	AL205 - Turbocor4 Axial displacement	R
306	AL206 - Turbocor4 Axial static load	R
307	AL207 - Turbocor4 Front radial disp X	R
308	AL208 - Turbocor4 Front radial disp Y	R
309	AL209 - Turbocor4 Front radial load X	R
310	AL210 - Turbocor4 Front radial load Y	R
311	AL211 - Turbocor4 Back radial disp X	R
312	AL212 - Turbocor4 Back radial disp Y	R
313	AL213 - Turbocor4 Back radial load X	R
314	AL214 - Turbocor4 Back radial load Y	R
315	AL215 - Turbocor4 Single phase Overcurrent	R
316	AL216 - Turbocor4 DC High Voltage	R
317	AL217 - Turbocor4 High current	R
318	AL218 - Turbocor4 Sensors error	R
319	AL219 - Turbocor4 IGBT error	R
320	AL220 - Turbocor4 High winding temp	R
321	AL221 - Turbocor4 Bearing error	R
322	AL222 - Turbocor4 Superheat	R
323	AL223 - Turbocor4 Inverter error signal	R
324	AL224 - Turbocor4 24Vdc fault	R
325	AL225 - Turbocor4 Motor Back EMF low	R
326	AL226 - Turbocor4 EEprom error	R
327	AL227 - Turbocor4 Generator mode	R
328	AL228 - Turbocor4 SCR phase	R
329	AL229 - Turbocor4 Offline	R
330	AL230 - Turbocor4 Startup failed	R


CREATING A BMS SYSTEM

Modbus RTU connection to RS485

The pCO5 + control card can communicate, using the RS485 RS485 Modbus RTU protocol, with an external BMS system; In order to make this connection the card needs specific accessories:

- **AER485P1:** If you want to connect the pCO5 + card to the BMS system by cable connection (refer to the AER485P1 accessory documentation for more information on the cable type);
- **AERNET:** If you want to connect the pCO5 + card to the BMS system via an ethernet connection (for more information, refer to the AERNET accessory documentation);

The connection between the pCO5 + card and the BMS systems is summarized in the diagram below;

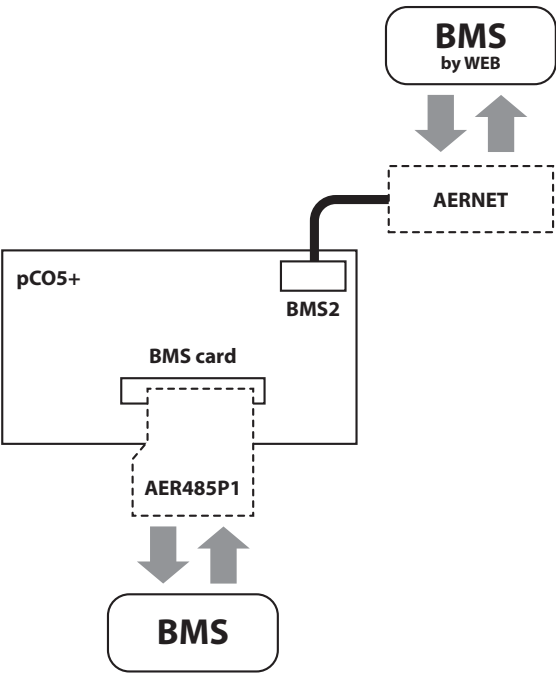

Default BMS Card Variables

Communication mode	Modbus RTU
Communication type	RS485 standard, asynchronous, 1 bit start
Communication speed	19200 baud
Stop bit	2 stop bit
Parity mode	No parity
Base adress	Protocol addresses (Base 0) The addresses start from zero. Example for reading the log = 1: 01 03 00 01 00 0A 94 0D

ANALOGUE VARIABLES

R = Modbus command code = 3

R / W = Modbus command code = 6

BMS Address	Description	UOM	Min	Max	Read/Write
1	U5 - Evaporator water outlet	°C	-999,9	999,9	R
2	U4 - Evaporator water inlet	°C	-999,9	999,9	R
3	IGV Compressor 1	%	0.0	110.0	R
4	IGV Compressor 2	%	0.0	110.0	R
5	Compressor inverter temperature 1	°C	-999,9	999,9	R
6	Compressor inverter temperature 2	°C	-999,9	999,9	R
7	U1 - High pressure	bar	-999,9	999,9	R
8	U2 - Low Pressure	bar	-999,9	999,9	R
9	Compression ratio calculated as U1 / U2	---	0	99,9	R
10	Software version X.Y (the final term .Z full address 51)	---	0	99,9	R
12	Compressor delivery temperature 1	°C	-10	999,9	R
13	Compressor delivery temperature 2	°C	-10	999,9	R
14	U9 - Condenser outlet liquid temperature	°C	0	999,9	R
15	U10 - Liquid thermostatic valve input temperature	°C	0	999,9	R
16	Compressor suction temperature 1	°C	-999,9	999,9	R
17	Compressor suction temperature 2	°C	-999,9	999,9	R
18	U3 - Common evaporator water outlet	°C	-999,9	999,9	R
19	U7 - Analog multifunction input	---	0	999,9	R
23	Liquid level	%	0,0	100,0	R
24	Required power Compressor 1 (kW)	KW	0	1000.0	R
25	Required power Compressor 2 (kW)	KW	0	1000.0	R
26	Power Consumption Compressor 1	KW	0	1000.0	R
27	Power Consumption Compressor 2	KW	0	1000.0	R
28	Superheat Compressor 1	K	-999,9	999,9	R
29	Superheat compressor 2	K	-999,9	999,9	R
30	U8 WTX - Condenser water outlet temperature	°C	-999,9	999,9	R
31	IGV Compressor 3	%	0	110.0	R
32	IGV Compressor 4	%	0	110.0	R
33	Compressor inverter temperature 3	°C	-999,9	999,9	R
34	Compressor inverter temperature 4	°C	-999,9	999,9	R
35	Compressor delivery temperature 3	°C	-999,9	999,9	R
36	Compressor delivery temperature 4	°C	-999,9	999,9	R
37	Compressor suction temperature 3	°C	-999,9	999,9	R
38	Compressor suction temperature 4	°C	-999,9	999,9	R
39	Required power Compressor 3 (kW)	KW	0	1000.0	R
40	Required power Compressor 4 (kW)	KW	0	1000.0	R
41	Absorbed Power Compressor 3	KW	0	1000.0	R
42	Power Consumption Compressor 4	KW	0	1000.0	R
43	Superheat compressor 3	K	-999,9	999,9	R
44	Superheat compressor 4	K	-999,9	999,9	R
46	U6 WTX - Condenser Water Inlet Temperature	°C	-999,9	999,9	R
191	Current setpoint fan / condenser pump	bar	0	999,9	R
192	Current Differentials fans / condenser pump	bar	-999,9	999,9	R
193	Liquid level setpoint (0.0 ... 100.0%)	%	0.0	100.0	R/W
197	Active plant differential	°C	-999,9	999,9	R
198	Current plant set point	°C	-999,9	999,9	R
202	Differential plant	°C	0	999,9	R/W
204	Set point 1, cold	°C	-999,9	999,9	R/W

BMS Address	Description	UOM	Min	Max	Read/Write
205	Set point 2, cold	°C	-999,9	999,9	R/W

INTEGER VARIABLES

R = Modbus command code = 3

R / W = Modbus command code = 6

BMS Address	Carel address	Description	UOM	Min	Max	Read/Write
5002	1	Chiller Mode (0 = Comfort; 1 = ECONOMY; 2 = FROM BUTTON;)	---	0	2	R/W
5003	2	Compressor start procedure status (INTERNAL USE AER-MEC)	---	0	9999	R
5004	3	Compressor state 1 (0 = off, 1 = lockout state, 2 = resetting, 3 = ramping up, 4 = partially closed, 5 = normal state, 6 = maxflow, 7 = min IGW, 8 = interlock open, 9 = fault waiting, 10 = high temp stop, 11 = loading up)	---	0	99	R
5005	4	Compressor status 2 (0 = off, 1 = lockout state, 2 = resetting, 3 = ramping up, 4 = partially closed, 5 = normal state, 6 = maxflow, 7 = min IGW, 8 = interlock open, 9 = fault waiting, 10 = high temp stop, 11 = loading up)	---	0	99	R
5006	5	Compressor Speed 1 [0 ... 48000] / 10 RPM	rpm	0	9999	R
5007	6	Compressor speed 2 [0 ... 48000] / 10 RPM	rpm	0	9999	R
5008	7	Pump pump 2 plant, top part	migliaia_h	0	999	R
5009	8	Pump counter 1 plant, top part	migliaia_h	0	999	R
5010	9	Pump pump 1 plant, lower part	h	0	999	R
5011	10	Pump pump 2 plant, lower part	h	0	999	R
5012	11	Cold demand limit	%	0	100	R/W
5013	12	Upper part counters, comp.1	migliaia_h	0	999	R
5014	13	Lower part counters, comp.1	h	0	999	R
5015	14	Upper part counters, comp.2	migliaia_h	0	999	R
5016	15	Lower part counters, comp.2	h	0	999	R
5017	16	Thermostatic request	%	0	100	R
5018	17	Thermostatic demand limit (from multiplier U7 power limitation)	%	0	100	R
5020	19	Required Limit Turbocor 1	%	0	100	R
5021	20	Required Limit Turbocor 2	%	0	100	R
5025	24	Total plant request	%	0	100	R
5026	25	Required power Compressor 1 (%)	%	0	100	R
5027	26	Required Power Compressor 2 (%)	%	0	100	R
5028	27	Speed fans / condenser pump	%	0	100	R
5029	28	EEV_A, liquid electronic valve opening A (stp)	steps	0	500	R
5030	29	EEV_A, liquid electronic valve opening A (%)	%	0	100	R
5031	30	Current Compressor Power 1	%	0	100	R
5032	31	Current compressor power 2	%	0	100	R
5033	32	Compressor Current 1	A	0	999	R
5034	33	Compressor Current 2	A	0	999	R
5035	34	Compressor Voltage 1	V	0	999	R
5036	35	Compressor Voltage 2	V	0	999	R
5037	36	Minimum speed [0 ... 48000] / 10 compressor 1	rpm	0	4800	R
5038	37	Minimum speed [0 ... 48000] / 10 compressor 2	rpm	0	4800	R
5039	38	Maximum speed [0 ... 48000] / 10 compressor 1	rpm	0	4800	R
5040	39	Maximum speed [0 ... 48000] / 10 compressor 2	rpm	0	4800	R
5048	47	Upper part counters, comp.3	migliaia_h	0	999	R
5049	48	Lower compute, comp3	h	0	999	R
5050	49	Upper part counters, comp.4	migliaia_h	0	999	R
5051	50	Lower compass, comp.4	h	0	999	R

BMS Address	Carel address	Description	UOM	Min	Max	Read/Write
5052	51	Software version Z (final part)	--	0	9	R
5071	70	Configurator - Chiller Signal (0 = TBX, 1 = WTX)	---	0		R
5072	71	WTX-Size Configurator	---	0		R
5073	72	WTX Configurator - Efficiency	---	0		R
5074	73	WTX Configurator - Exchanger	---	0		R
5075	74	WTX Configurator - Version	---	0		R
5076	75	WTX Configurator - Power	---	0		R
5102	101	Compressor state 3 (0 = off, 1 = lockout state, 2 = resetting, 3 = ramping up, 4 = partially closed, 5 = normal state, 6 = maxflow, 7 = min IGV, 8 = interlock open, 9 = fault waiting, 10 = high temp stop, 11 = loading up)	---	0	99	R
5103	102	Compressor state 4 (0 = off, 1 = lockout state, 2 = resetting, 3 = ramping up, 4 = partially closed, 5 = normal state, 6 = maxflow, 7 = min IGV, 8 = interlock open, 9 = fault waiting, 10 = high temp stop, 11 = loading up)	---	0	99	R
5104	103	Compressor speed 3 [0 ... 48000] / 10 RPM	rpm	0	4800	R
5105	104	Compressor speed 4 [0 ... 48000] / 10 RPM	rpm	0	4800	R
5106	105	Required Limit Turbocor 3	%	0	100	R
5107	106	Required Limit Turbocor 4	%	0	100	R
5108	107	Required power Compressor 3 (%)	%	0	100	R
5109	108	Required power Compressor 4 (%)	%	0	100	R
5110	109	Current compressor power 3	%	0	100	R
5111	110	Current compressor power 4	%	0	100	R
5112	111	Compressor Current 3	A	0	999	R
5113	112	Compressor Current 4	A	0	999	R
5114	113	Compressor Voltage 3	V	0	999	R
5115	114	Compressor Voltage 4	V	0	999	R
5116	115	Minimum speed [0 ... 48000] / 10 compressor 3	rpm	0	4800	R
5117	116	Minimum speed [0 ... 48000] / 10 compressor 4	rpm	0	4800	R
5118	117	Maximum speed [0 ... 48000] / 10 compressor 3	rpm	0	4800	R
5119	118	Maximum speed [0 ... 48000] / 10 compressor 4	rpm	0	4800	R
5206	205	Units Status (1 = On, 2 = Alarm, 3 = Reboot, 4 = Off BMS, 5 = Off Scheduler, 6 = Off DIN, 7 = Off Touch, 8 = Not Used, 9 =)	---	0	9	R
6240	1239	EEV_B, liquid electronic valve opening B (%)	%	0	100	R
6241	1240	EEV_B, liquid electronic valve opening B (stp)	steps	0	500	R

DIGITAL VARIABLES

R = Modbus command code = 1

R / W = Modbus command code = 5

Address	Description	Read/Write
1	On / Off Units'	R
2	Reset alarms (1 = reset)	R/W
4	ID1 digital input off / on (0 = closed, 1 = open)	R
10	On / Off plant by Superv.	R/W
13	Compressor Alarm 1	R
14	Compressor Alarm 2	R
30	NO1 - Pump 1 evaporator	R
31	NO14 - Pump 2 evaporator	R
32	NO2 - Antifreeze resistance	R
33	NO4 - EEV valve suction	R
34	NO5 - Conservation Consent	R
35	NO7 - I / LOCK 1 - Turbocharger Consent 1	R
36	Compressor 1 ON	R
37	Compressor 2 ON	R
38	NO12 - I / BLOCK 2 - Turbocharger Consent 2	R
42	NO3 - Fan / condenser pump	R
43	Turbocharger Solenoid Inverter 1	R
44	Turbocharger solenoid 2	R
45	Solenoid turbocharger engine 1	R
46	Solenoid turbocharger 2	R
49	NO13 - I / BLOCK 3 - Turbocharger Consent 3	R
50	NO15 - I / BLOCK 4 - Turbocharger Consent 4	R
51	Compressor 3 ON	R
52	Compressor 4 ON	R
53	Turbocharger Solenoid Inverter 3	R
54	Turbocharger solenoid inverter 4	R
55	Solenoid turbocharger 3	R
56	Turbocharged solenoid engine 4	R
78	AL108 - Turbocor2 SCR phase	R
79	AL109 - Turbocor2 Offline	R
80	AL110 - Turbocor2 Startup failed	R
81	AL111 - EVD Offline	R
82	AL112 - EVD Probe S1 error	R
83	AL113 - EVD Probe S2 Error	R
84	AL114 - EVD Engine Error EEV	R
85	AL115 - EVD Eeprom error	R
86	AL116 - Low Liquid Level	R
87	AL117 - High Liquid Level	R
88	AL118 - Disconnected Modbus master (communication with Turbocor)	R
89	AL119 - Thermal compressor 2	R
90	AL120 - EEV, Battery Low	R
93	AL123 - Fuga Gas (ID16 Open)	R
100	Sum of all alarms	R
101	AL001 - Digital input	R
102	AL002 - Voltage or phase monitor	R
103	AL003 - Evaporator Antifreeze	R
104	AL004 - Compressor Thermal 1	R
105	AL005 - Plant Flow Switch	R
106	AL006 - Digital input, EEV	R

Address	Description	Read/Write
107	AL007 - Pressure High Pressure	R
108	AL008 - High Pressure Transducer	R
109	AL009 - Low Pressure Pressure Switch	R
110	AL010 - Low Pressure Transducer	R
111	AL011 - Low pressure	R
112	AL012 - Fan heat / condenser pump	R
113	AL013 - Heat pump 1 plant	R
114	AL014 - Heat pump 2 plant	R
115	AL015 - Maintenance of pump 1 plant	R
116	AL016 - Maintenance of pump 2 plant	R
117	AL017 - Compressor Maintenance 1	R
118	AL018 - Compressor Maintenance 2	R
119	AL019 - Probe U1 faulty or disconnected	R
120	AL020 - Probe U2 faulty or disconnected	R
121	AL021 - Probe U3 faulty or disconnected	R
122	AL022 - Probe U4 faulty or disconnected	R
123	AL023 - Probe U5 faulty or disconnected	R
124	AL024 - Probe U6 faulty or disconnected	R
125	AL025 - Probe U7 faulty or disconnected	R
126	AL026 - Probe U8 faulty or disconnected	R
127	AL027 - Probe U9 faulty or disconnected	R
128	AL028 - Probe U10 faulty or disconnected	R
129	AL029 - Turbocor1 High Temperature Gas Pressed	R
130	AL030 - Turbocor2 High Pressure Gas Temperature	R
131	AL031 - Turbocor1 Inverter temp.	R
132	AL032 - Turbocor1 Discharge temp	R
133	AL033 - Turbocor1 Suction press.	R
134	AL034 - Turbocor1 Discharge press.	R
135	AL035 - Turbocor1 Rotor Lock	R
136	AL036 - Turbocor1 Phase current	R
137	AL037 - Turbocor1 Cavity temp.	R
138	AL038 - Turbocor1 overcurrent	R
139	AL039 - Turbocor1 Compressor ratio	R
140	AL040 - Turbocor1 DC Low Voltage	R
141	AL041 - Turbocor1 SCR temp.	R
142	AL042 - Turbocor1 System Locked out	R
143	AL043 - Turbocor1 Calibration failed	R
144	AL044 - Turbocor1 Startup failed	R
145	AL045 - Turbocor1 Axial displacement	R
146	AL046 - Turbocor1 Axial static load	R
147	AL047 - Turbocor1 Front radial disp X	R
148	AL048 - Turbocor1 Front radial disp Y	R
149	AL049 - Turbocor1 Front radial load X	R
150	AL050 - Turbocor1 Front radial load Y	R
151	AL051 - Turbocor1 Back radial disp X	R
152	AL052 - Turbocor1 Back radial disp Y	R
153	AL053 - Turbocor1 Back radial load X	R
154	AL054 - Turbocor1 Back radial load Y	R
155	AL055 - Turbocor1 Single phase Overcurrent	R
156	AL056 - Turbocor1 DC High voltage	R
157	AL057 - Turbocor1 High current	R
158	AL058 - Turbocor1 Sensors error	R

Address	Description	Read/Write
159	AL059 - Turbocor1 IGBT error	R
160	AL060 - Turbocor1 High winding temp.	R
161	AL061 - Turbocor1 Bearing error	R
162	AL062 - Turbocor1 Superheat	R
163	AL063 - Turbocor1 Inverter error signal	R
164	AL064 - Turbocor1 AVC data missing	R
165	AL065 - Turbocor1 Motor Back EMF low	R
166	AL066 - Turbocor1 EEprom error	R
167	AL067 - Turbocor1 Generator mode	R
168	AL068 - Turbocor1 SCR phase	R
169	AL069 - Turbocor1 Offline	R
170	AL070 - Turbocor1 Startup failed	R
171	AL071 - Turbocor2 Inverter temp.	R
172	AL072 - Turbocor2 Discharge temp.	R
173	AL073 - Turbocor2 Suction Press.	R
174	AL074 - Turbocor2 Discharge press.	R
175	AL075 - Turbocor2 Rotor Lock	R
176	AL076 - Turbocor2 Phase current	R
177	AL077 - Turbocor2 Cavity temp.	R
178	AL078 - Turbocor2 overcurrent	R
179	AL079 - Turbocor2 Compressor ratio	R
180	AL080 - Turbocor2 DC Low Voltage	R
181	AL081 - Turbocor2 SCR temp.	R
182	AL082 - Turbocor2 System Locked out	R
183	AL083 - Turbocor2 Calibration failed	R
184	AL084 - Turbocor2 Startup failed	R
185	AL085 - Turbocor2 Axial displacement	R
186	AL086 - Turbocor2 Axial static load	R
187	AL087 - Turbocor2 Front radial disp X	R
188	AL088 - Turbocor2 Front radial disp Y	R
189	AL089 - Turbocor2 Front radial load X	R
190	AL090 - Turbocor2 Front radial load Y	R
191	AL091 - Turbocor2 Back radial disp X	R
192	AL092 - Turbocor2 Back radial disp Y	R
193	AL093 - Turbocor2 Back radial load X	R
194	AL094 - Turbocor2 Back radial load Y	R
195	AL095 - Turbocor2 Single phase Overcurrent	R
196	AL096 - Turbocor2 DC High Voltage	R
197	AL097 - Turbocor2 High current	R
198	AL098 - Turbocor2 Sensors error	R
199	AL099 - Turbocor2 IGBT error	R
200	AL100 - Turbocor2 High winding temp	R
201	AL101 - Turbocor2 Bearing error	R
202	AL102 - Turbocor2 Superheat	R
203	AL103 - Turbocor2 Inverter error signal	R
204	AL104 - Turbocor2 AVC data missing	R
205	AL105 - Turbocor2 Motor Back EMF low	R
206	AL106 - Turbocor2 EEprom error	R
207	AL107 - Turbocor2 Generator mode	R
225	AL125 - Compressor Maintenance 3	R
226	AL126 - Compressor Maintenance 4	R
227	AL127 - Reset Parameters ... Reboot Card!	R

Address	Description	Read/Write
228	AL128 - Turbocor3 High Temperature Gas Pressed	R
229	AL129 - Turbocor4 High Temperature Gas Pressed	R
230	Compressor Alarm 3	R
231	Compressor Alarm 4	R
232	AL130 - Compressor Thermal 3	R
233	AL131 - Compressor Thermal 4	R
251	AL151 - Turbocor3 Inverter temp.	R
252	AL152 - Turbocor3 Discharge temp.	R
253	AL153 - Turbocor3 Suction Press.	R
254	AL154 - Turbocor3 Discharge press.	R
255	AL155 - Turbocor3 Rotor Lock	R
256	AL156 - Turbocor3 Phase current	R
257	AL157 - Turbocor3 Cavity temp.	R
258	AL158 - Turbocor3 overcurrent	R
259	AL159 - Turbocor3 Compressor ratio	R
260	AL160 - Turbocor3 DC Low Voltage	R
261	AL161 - Turbocor3 SCR temp.	R
262	AL162 - Turbocor3 System Locked out	R
263	AL163 - Turbocor3 Calibration failed	R
264	AL164 - Turbocor3 Startup failed	R
265	AL165 - Turbocor3 Axial displacement	R
266	AL166 - Turbocor3 Axial static load	R
267	AL167 - Turbocor3 Front radial disp X	R
268	AL168 - Turbocor3 Front radial disp Y	R
269	AL169 - Turbocor3 Front radial load X	R
270	AL170 - Turbocor3 Front radial load Y	R
271	AL171 - Turbocor3 Back radial disp X	R
272	AL172 - Turbocor3 Back radial disp Y	R
273	AL173 - Turbocor3 Back radial load X	R
274	AL174 - Turbocor3 Back radial load Y	R
275	AL175 - Turbocor3 Single phase Overcurrent	R
276	AL176 - Turbocor3 DC High Voltage	R
277	AL177 - Turbocor3 High current	R
278	AL178 - Turbocor3 Sensors error	R
279	AL179 - Turbocor3 IGBT error	R
280	AL180 - Turbocor3 High winding temp	R
281	AL181 - Turbocor3 Bearing error	R
282	AL182 - Turbocor3 Superheat	R
283	AL183 - Turbocor3 Inverter error signal	R
284	AL184 - Turbocor3 24Vdc fault	R
285	AL185 - Turbocor3 Motor Back EMF low	R
286	AL186 - Turbocor3 EEprom error	R
287	AL187 - Turbocor3 Generator mode	R
288	AL188 - Turbocor3 SCR phase	R
289	AL189 - Turbocor3 Offline	R
290	AL190 - Turbocor3 Startup failed	R
291	AL191 - Turbocor4 Inverter temp.	R
292	AL192 - Turbocor4 Discharge temp.	R
293	AL193 - Turbocor4 Suction Press.	R
294	AL194 - Turbocor4 Discharge press.	R
295	AL195 - Turbocor4 Rotor Lock	R
296	AL196 - Turbocor4 Phase current	R

Address	Description	Read/Write
297	AL197 - Turbocor4 Cavity temp.	R
298	AL198 - Turbocor4 overcurrent	R
299	AL199 - Turbocor4 Compressor ratio	R
300	AL200 - Turbocor4 DC Low Voltage	R
301	AL201 - Turbocor4 SCR temp.	R
302	AL202 - Turbocor4 System Locked out	R
303	AL203 - Turbocor4 Calibration failed	R
304	AL204 - Turbocor4 Startup failed	R
305	AL205 - Turbocor4 Axial displacement	R
306	AL206 - Turbocor4 Axial static load	R
307	AL207 - Turbocor4 Front radial disp X	R
308	AL208 - Turbocor4 Front radial disp Y	R
309	AL209 - Turbocor4 Front radial load X	R
310	AL210 - Turbocor4 Front radial load Y	R
311	AL211 - Turbocor4 Back radial disp X	R
312	AL212 - Turbocor4 Back radial disp Y	R
313	AL213 - Turbocor4 Back radial load X	R
314	AL214 - Turbocor4 Back radial load Y	R
315	AL215 - Turbocor4 Single phase Overcurrent	R
316	AL216 - Turbocor4 DC High Voltage	R
317	AL217 - Turbocor4 High current	R
318	AL218 - Turbocor4 Sensors error	R
319	AL219 - Turbocor4 IGBT error	R
320	AL220 - Turbocor4 High winding temp	R
321	AL221 - Turbocor4 Bearing error	R
322	AL222 - Turbocor4 Superheat	R
323	AL223 - Turbocor4 Inverter error signal	R
324	AL224 - Turbocor4 24Vdc fault	R
325	AL225 - Turbocor4 Motor Back EMF low	R
326	AL226 - Turbocor4 EEprom error	R
327	AL227 - Turbocor4 Generator mode	R
328	AL228 - Turbocor4 SCR phase	R
329	AL229 - Turbocor4 Offline	R
330	AL230 - Turbocor4 Startup failed	R



AERMEC S.p.A.
37040 Bevilacqua (VR) Italia-Via Roma, 996
Tel. (+39) 0442 633111
Telefax 0442 93577-(+39) 0442 93566
www.aermec.com - info@aermec.com



I dati tecnici riportati sulla seguente documentazione non sono impegnativi. Aermec si riserva la facoltà di apportare in qualsiasi momento tutte le modifiche ritenute necessarie per il miglioramento del prodotto.